

TYPE A PACKAGE FOR TWO UNIT DOSE SYRINGES

Model: RSS 12mL - UNIT DOSE SHIELD (UDS)

Eichrom Technologies designs and manufactures compact Type A shipping systems for the safe transport of radionuclides. Our shielded RAD SHIPPING SYSTEMS are built for strength, efficiency, and ergonomic use, ensuring secure transport, easy handling, and full regulatory compliance. We offer both standard and customizable solutions with fast delivery and expert support. To place an order, request pricing, or ask questions, contact us today. ☎ +1 (630) 963-0320 ✉ info@eichrom.com

- ✓ **Stainless steel surfaces** prevent contamination from hazardous (lead) materials
- ✓ **¼-turn syringe pig (UDS) twist-off** reduces handling time and radiation exposure
- ✓ **Ultra-robust design and hardware** ensure an extended lifespan
- ✓ **Hygienic UDS units** are easy to clean and dishwasher-safe
- ✓ **Reduced case size** for optimal space efficiency



Stackable case with refined design


provides durable protection
and visual appeal

Specially designed hinge

ensures durability for long-lasting
performance, eliminating the need for
an intrusive lanyard when opened

Polished stainless steel components

make cleaning easy and act as a barrier
to the foam and lead shielding inside

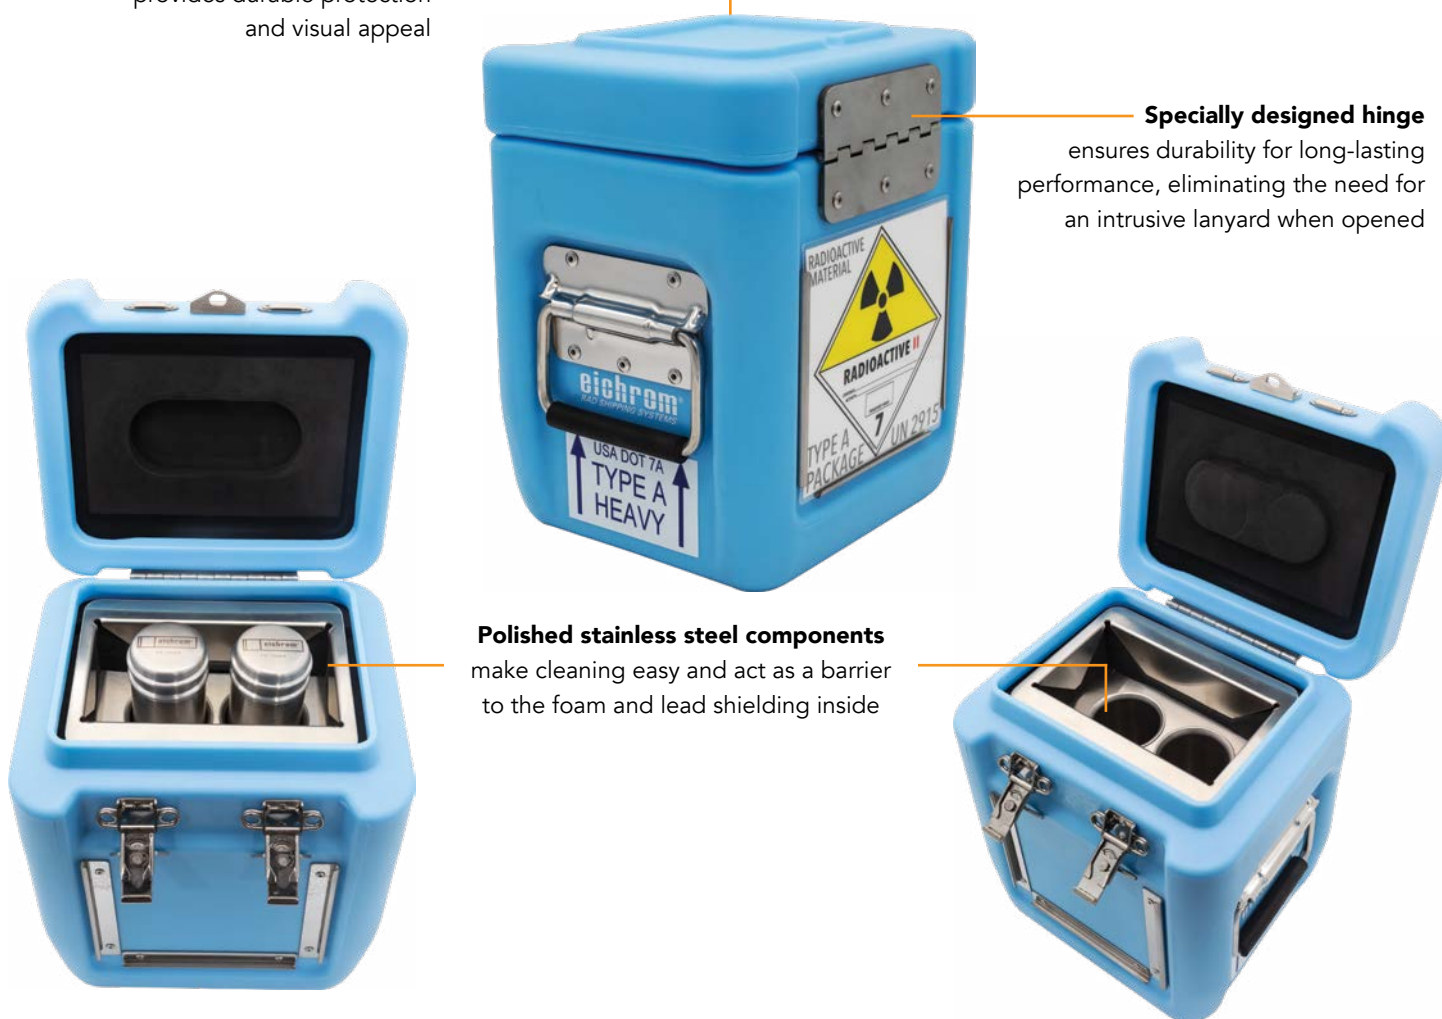

RSS 12ML – UNIT DOSE SHIELD SPECIFICATIONS

Part Number	SH-SYS-UDS-12ML
Description	Rad Shipping System for (2) 12mL Unit Dose Shields. Includes Standard Unit Dose Case and (2) 12mL Unit Dose Shields
Authorized Contents	(2) 3 - 12mL Syringes
Case Color	Light Blue
Total Weight	63 lb (28.6 kg)
Max Activity F-18 for Yellow II (Approximate)	800 mCi (29.6 GBq)

REGULATORY COMPLIANCE



DOT Type A Packaging
Requirements



IATA Dangerous Goods
Regulations



IAEA Regulations For The Safe
Transport Of Radioactive Material

MORE INFO?

Contact us today:

+1 (630) 963-0320

info@eichrom.com

eichrom[®]
TECHNOLOGIES

A GCI COMPANY